


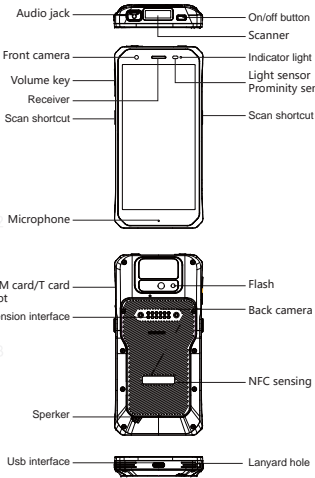
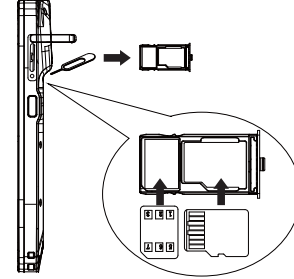









<p style="text-align: center;">Mobile Computer (Handheld) C7000</p> <p style="text-align: center;">Quick start guide</p>	<p>Thank you for purchasing Smart Handheld Terminal C7000. Please read this guide first before you use the device, and it will ensure your safety and the proper use of equipment. About the equipment configuration, please check with the relevant contracts of the device or consult the seller who sells the equipment to you.</p> <p>The pictures in this guide are for reference only, if some pictures do not match the physical product, please in kind prevail. Many network functions which are described in this manual are the specific services provided by the network service providers. Whether these functions, it depends on the Internet service provider who services for you.</p> <p>Without the company's permission, anyone should not use any forms or any ways to copy, excerpts, backup, modify, spread, translated into other languages, all or partly used for commercial purposes in this manual.</p> <p>Indicator icon</p> <ul style="list-style-type: none">  Warning: may hurt themselves or others  Caution: may damage your equipment or other devices  Note: the annotations, use hints or additional information 	<p style="text-align: center;">Know C7000</p> 	<p style="text-align: center;">SIM card: Install and remove</p>  <p>■ Install SIM card/T card Open the waterproof plug, insert the card pin vertically into the small hole below the card slot, and press firmly to make the card. Slot pops up. Put the SIM card and T card into the corresponding card slot, and then insert the card slot back into the machine, install the waterproof plug.</p> <p>■ Remove SIM card/T card Same as installing the card, first pop out the card slot, take out the SIM card and the T card, and then remove the card. Insert the slot back into the machine and install the waterproof plug.</p>	<p style="text-align: center;">Charging the battery</p> <p> Before using the device for the first time or the battery for a long time unused, the battery must be charged. Only our company's matching chargers, batteries and data cables can be used. Other chargers or cables unauthorized may cause the battery explosion or damage. In the condition of charging, the LED light is red; when the LED light color turns green, it indicates the battery charge finished; when the battery is low, the screen will show the warning message; when power is too low, the device will automatically shut down.</p> <p style="text-align: center;">On/off/sleep/wake-up device</p> <p>Open the device: Press and hold the on / off button in the top right corner of the device and continue for some time, until the device boot screen appears and loading progress completed. It will enter Android operating system. It takes time to initialize, please be patient. Turn off the device: Press and hold the on / off button in the top of the device and continue for some time, until the shutdown options dialog box popping up, then click Shut Down to off the device. When the device is in working state, pressing on/off key, the device will enter into dormant state. If you want to exit dormant state, press on/off key again.</p>
<p>Troubleshooting</p> <p>After pressing the power button, the device is not on.</p> <ul style="list-style-type: none"> • When the battery power is too low, please charge it. <p>The device shows network or service error message</p> <ul style="list-style-type: none"> • When you're in the place where the signal is weak or receiving badly, it may be lost the absorptive capacity. So please try again after moving to other places. <p>Touch screen response slowly or is not correct</p> <ul style="list-style-type: none"> • If the device has a touch screen but the touch screen response is not correct, please try the following: <ul style="list-style-type: none"> • Remove the touch screen of any protective film. • Please make sure that your fingers are dry and clean when you click the touch screen. • To remove any temporary software error, please restart the device. • If the touch screen is scratched or damaged, please contact seller. <p>Device is frozen or severe mistake</p> <ul style="list-style-type: none"> • If the device is frozen or hang, it may need to shut down the program or restart to regain the function. If the device is frozen or slow, hold down the power button for 6 seconds, then it will automatically restart. <p>Standby time is short</p> <ul style="list-style-type: none"> • Use the functions such as Bluetooth /WA/LAN/GPS/automatic rotating/data business, it will use more power, so we recommend you to close the functions when it is not in use. • If there are some programs in the background, close some not to use can greatly save the electricity. 	<p>Can't find another Bluetooth device</p> <ul style="list-style-type: none"> • To ensure that the device has started the Bluetooth wireless function. • Make sure that the distance between the two devices is within the largest Bluetooth range (10m). <p>Use Notes</p> <p>The operating environment</p> <ul style="list-style-type: none"> • Please do not use this device in the thunderstorm weather, because the thunderstorm weather may result in the equipment failure, or click the danger. • Please put the equipment from rain, moisture and liquids containing acidic substances, or it will make the electronic circuit boards corrosion. • Don't store the device in overheating, high temperature, or it will shorten the life of electronic devices. • Don't store the device in a too cold place, because when the device's temperature rises, moisture can form inside, and it might damage the circuit board. • Do not attempt to disassemble the device, non-professional personnel handling can damage it. • Do not throw, beat or intense crash the device, because rough treatment will destroy the device's parts, and it may cause the device failure. <p>Children's health</p> <ul style="list-style-type: none"> • Please put the device, its components and accessories in the place where children can't touch. • This device is not toys, so children should be under adult supervision to use it. 	<p>The charger security</p> <ul style="list-style-type: none"> • When charging the device, power sockets should be installed near the device and should be easy to hit. And the areas must be far away from the debris, flammable or chemicals. • Please do not fall or crash the charger. When the charger shell is damaged, please ask the vendor for replacement. • If the charger or the power cord is damaged, please do not continue to use, so as to avoid electric shock or fire. • Please do not fall or crash the charger. When the charger shell is damaged, please ask the vendor for replacement. • Please do not use wet hand to touch the power cord, or with power supply cable way out the charger. • The charger must meet the "2.5 restricted power" in the request of the standard <GB4943.1 information technology equipment safety • IF the device needs to connect USB port, please make sure the SUB contains USB port - IF logo and its performance is in accordance with the relevant specification of the USB - IF. <p>The battery safety</p> <ul style="list-style-type: none"> • Do not use the battery short circuit, or use a metal or other conductive objects to contact with the battery terminal. • Please do not disassemble, squeeze, twist, pierce or cut the battery. • Please do not insert foreign body in the battery, contact the battery with water or other liquid, make the cells exposed to fire, explosion or other risk sources. • Do not put or store the battery in high temperature environment. • If there is a battery leak, do not let the liquid on the skin or eyes, and if accidentally touched, please rinse with plenty of water, and seek for medical advice immediately. 	<ul style="list-style-type: none"> • Please do not put the battery in a microwave or in the dryer • Please do not throw the battery into the fire • When a device in standby time obviously shorter than in the normal time, please replace the battery <p>Repair and Maintenance</p> <p>Don't use strong chemicals or powerful detergent to clean the device. If it is dirty, please use a soft cloth to clean the surface with a very dilute solution of glass cleaner. Screen can be wiped with alcohol cloth, but be careful not to let the fluid accumulate around the screen. Dry the display with a soft non-woven cloth immediately, in order to prevent the screen from leaving the strip traces.</p> <p>CE Notice</p> <ol style="list-style-type: none"> 1. CAUTION : RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS. 2. The product shall only be connected to a USB interface of version USB2.0 3. Adapter shall be installed near the equipment and shall be easily accessible. 4. EUT Operating temperature: -20°C ~ 40°C 5. The plug considered as disconnect device of adapter. 6. The device complies with RF specifications when the device used at 0cm from your body. 7. This equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. <p style="text-align: center;"></p>	<p style="text-align: center;">E-waste Disposal Declaration</p> <p>E-Waste refers to discarded electronics and electronic equipment (WEEE). Ensure that an authorized agency repairs devices when needed. Do not dismantle the device on your own. Always discard used electronic products, batteries and accessories at the end of their life cycle; use an authorized collection point or collection center.</p> <p>Do not dispose of e-waste into garbage bins. Do not dispose of batteries into household waste. Some waste contains hazardous chemicals if not disposed properly. Improper disposal of waste may prevent natural resources from being reused, as well as release toxins and greenhouse gases into the environment.</p> <p>Technical support is provided by the Company's regional Partners.</p> <div style="text-align: center;">     </div> <p style="text-align: center;">www.pinetree.in</p> <p style="text-align: center;"> 1800 8334 666</p> <p style="text-align: center;">info@pinetree.in</p>